


jWIN JD-TV108 **PORTABLE DVD PLAYER**

Quick Guide

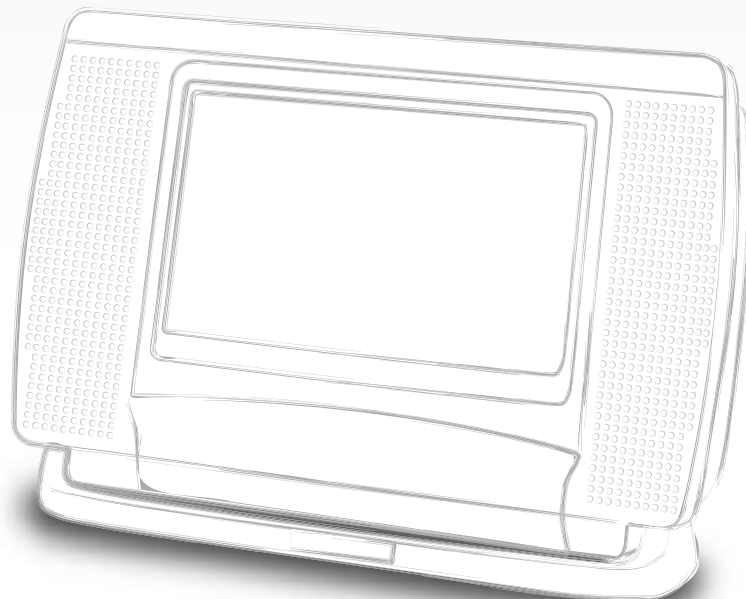

- Before attempting to connect, operate or adjust this product, please save and read the Quick Guide completely.
- The style of the product shown in the Quick Guide may be different from the actual unit due to various models.

Playable Format:


DVD/DVD±R/DVD±RW/Audio CD/Kodak Picture CD/JPEG Picture CD/MPEG 4/DviX



Getting to Know Your Portable DVD Player


Welcome to the Portable DVD Player Quick Guide. This Guide will instruct you to identify and set up your Portable DVD Player in a quick and easy way. Please carefully follow the instructions.

Front View

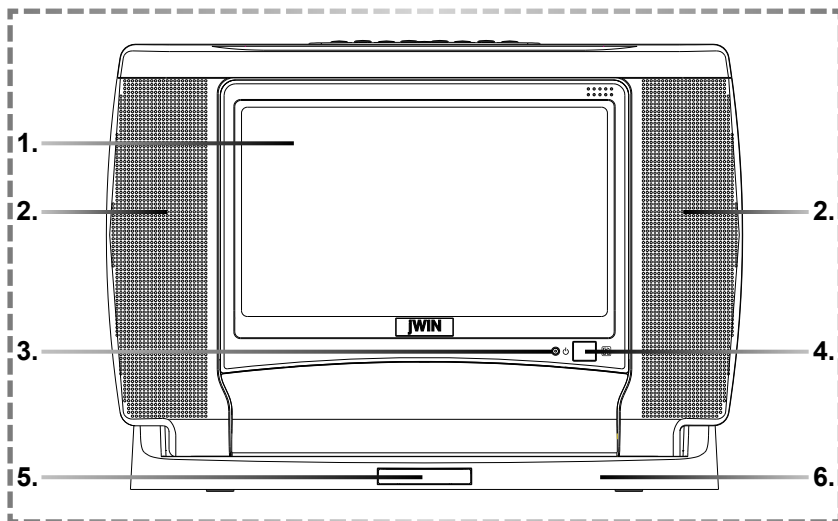

- | | |
|--------------------|---------------------------|
| 1. LCD Screen | 4. Remote Sensor |
| 2. Speakers | 5. Remote Control Carrier |
| 3. Power Indicator | 6. Base |


Top View

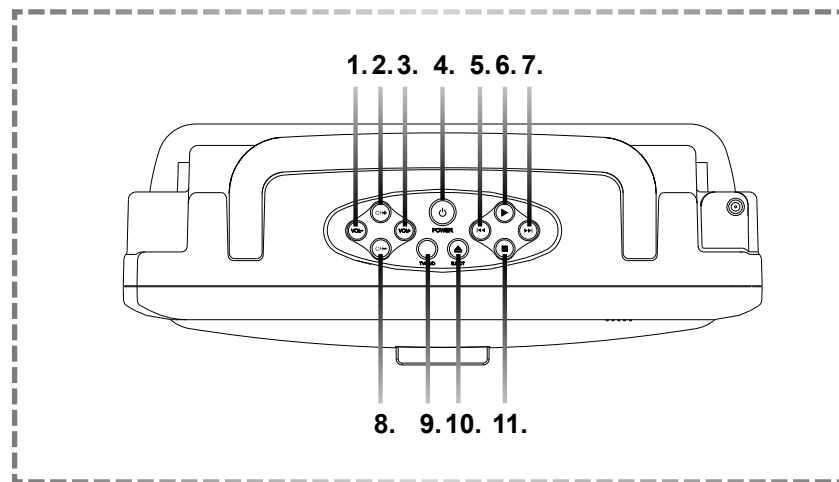

- | | |
|----------------------|----------------------|
| 1. VOLUME(-) Button | 7. NEXT Button |
| 2. CHANNEL(+) Button | 8. CHANNEL(-) Button |
| 3. VOLUME(+) Button | 9. TV/DVD Button |
| 4. POWER Button | 10. EJECT Button |
| 5. PREVIOUS Button | 11. STOP Button |
| 6. PLAY Button | |



Right Side View

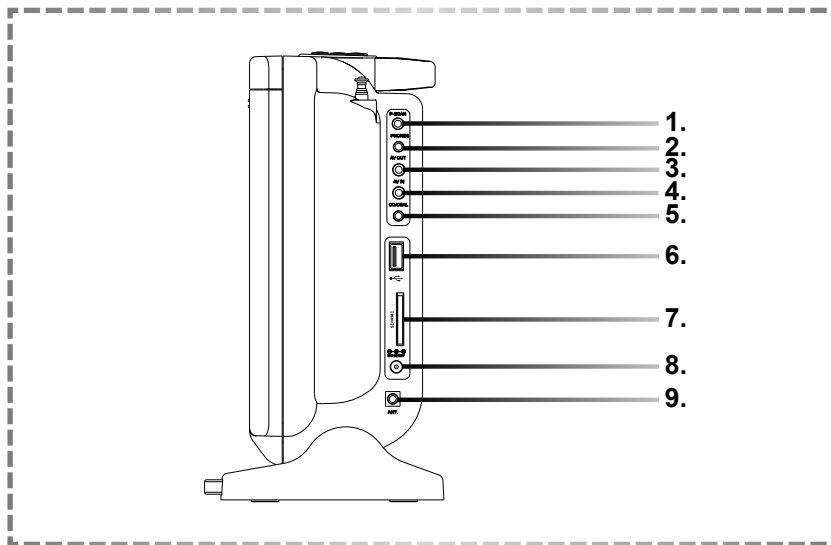


- | | |
|------------------------|-------------------------|
| 1. P-SCAN Output Jack | 6. USB Port |
| 2. PHONES Jack | 7. SD/MMC Card Slot |
| 3. AV OUT Jack | 8. DC IN Jack |
| 4. AV IN Jack | 9. CABLE IN (Ant.) Jack |
| 5. COAXIAL Output Jack | |

Battery Installation for the Remote Control

Insert the battery and match the (+) and (-) on battery to the marks inside the battery compartment.

First-time use:

Remember to remove the insulating mylar strip from the battery.

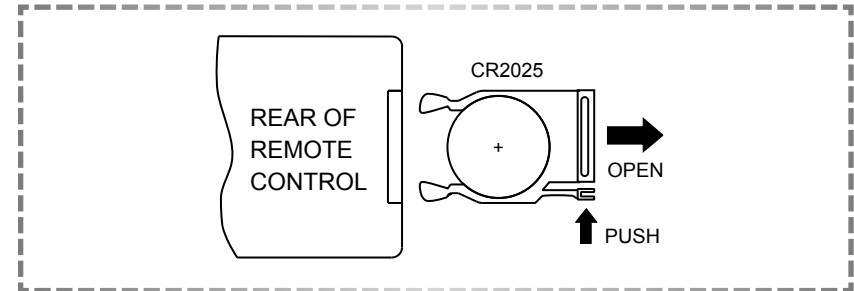

Service life of battery:


1. The battery in the Remote Control normally lasts for about one year, although this depends on how often and for what operations the Remote Control is used.
2. If the remote control unit fails to work even when it is operated near the player, replace the battery.
3. Use a 3V lithium battery (No. CR2025 or equivalent).



Getting to Know Your Portable DVD Player

Remote Control


1. Setup Button
2. Power Button
3. Subtitle Button
4. Zoom Button
5. Cursor Button (▲)
6. Menu Button
7. OK Button
8. Cursor Button (◀)
9. Cursor Button (▼)
10. Return Button
11. Pause Button
12. Play Button
13. Fast Forward Button
14. Fast Backward Button
15. LCD Button
16. Mode Button
17. Angle Button
18. Audio Button
19. Title Button
20. Volume(+) Button
21. Cursor Button (▶)
22. Volume(-) Button
23. Search Button

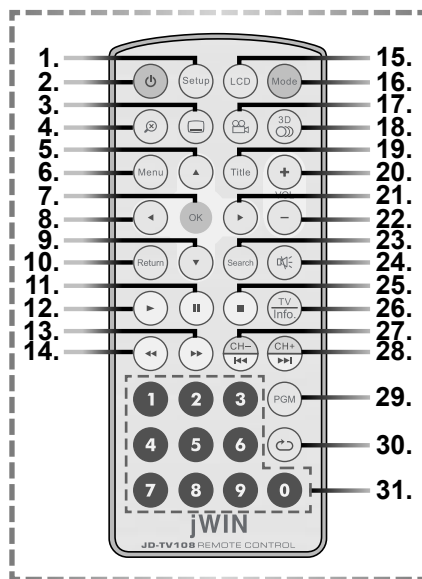

24. Mute Button
25. Stop Button
26. TV Source/Info. Button
27. Channel(-)/Previous Button
28. Channel(+)/Next Button
29. Program Button
30. Repeat Button
31. Number Buttons

Remote Control Operation Range

Point the remote control unit no more than 6 meters (20 ft.) from the remote control sensor and within about 60° of the front of the unit.

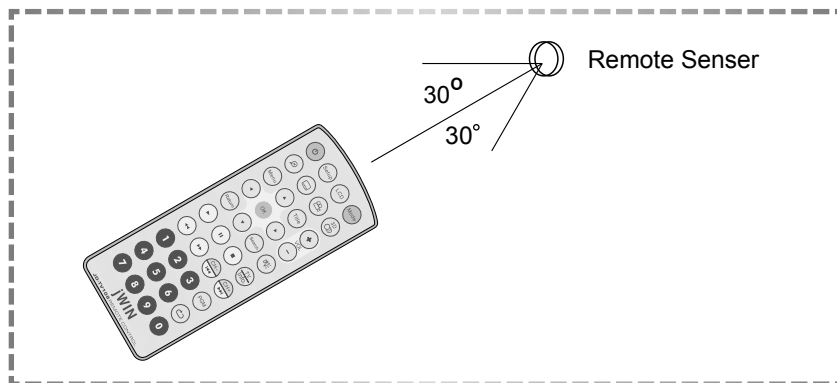

The operating distance may vary according to the brightness of the room.




Note:

- Do not point bright lights at the remote control signal sensor (on the unit).
- Do not place objects between the remote control unit and the remote control signal sensor.
- Do not use this remote control unit while operating the remote control or the other equipment.



Connect to External Equipment

1. Connect the Portable DVD Player to Power.
Please connect the supplied AC adapter to the DC IN jack on the right side of the unit.

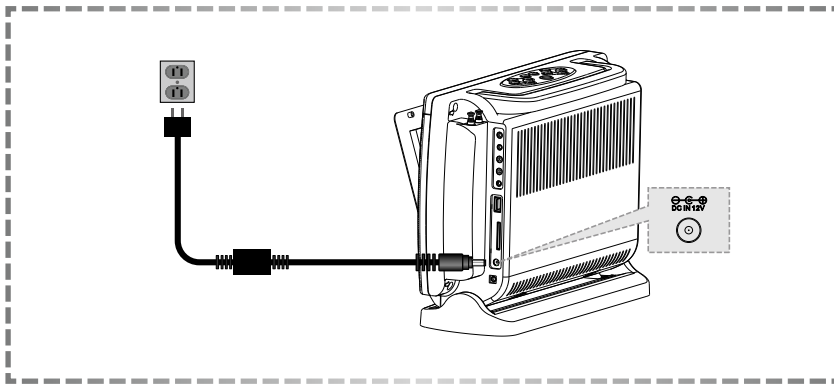


2. Connect it with earphones or connect it TO external equipment.

If you want to enjoy a better listening and viewing quality, you can connect the Portable DVD Player to external equipment, such as a TV or an audio amplifier with speakers.



Note:


- Before connecting, make sure to turn off the power on the Portable DVD Player and any external equipment.

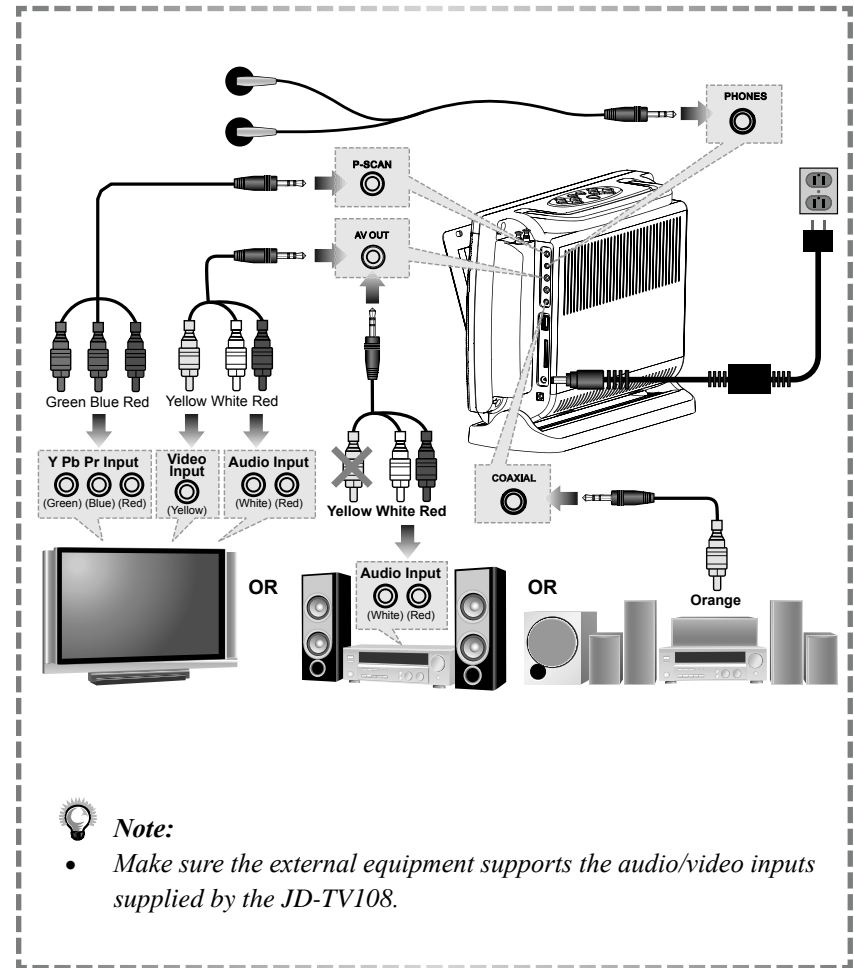



Note:

- Make sure the external equipment supports the audio/video inputs supplied by the JD-TV108.


Quick Operation Guide

3. Press  **Power** button on the top panel of the unit to turn on the DVD Player.

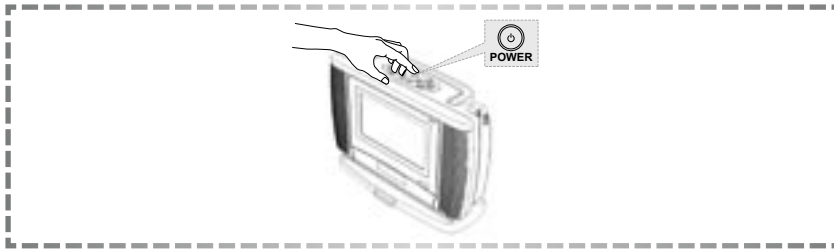

4. Press  **Eject** button on the top panel of the unit to open the disc cover. To widen the cover gap, pull the cover forward.

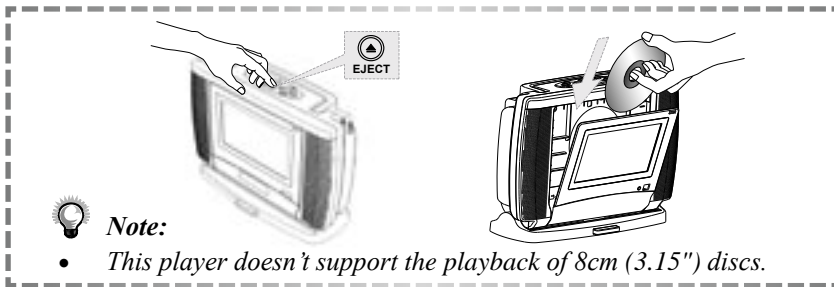

5. Gently hold the edge of the disc, then put it in the disc frame with the printed side down.



Note:


- This player doesn't support the playback of 8cm (3.15") discs.

6. Close the disc cover.

7. Press  **Play** button on the top panel of the unit or **Play**  on the remote control to play the disc.

Input from External Equipment

You could input images and sounds FROM external equipment by connecting the portable DVD player to external equipment with audio or video cables.

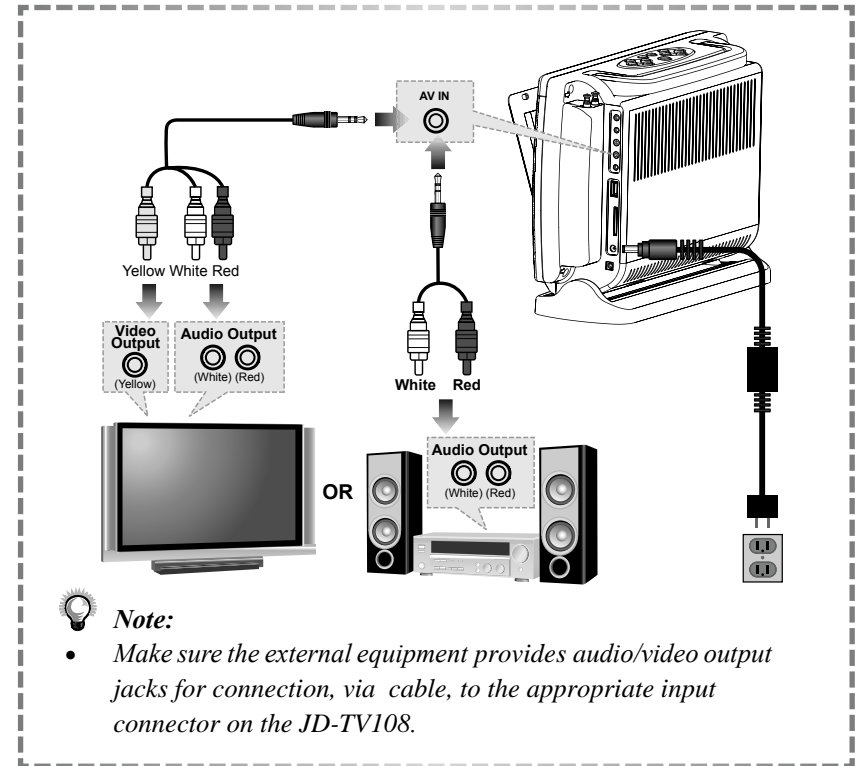


Note:

- Make sure the external equipment provides audio/video output jacks for connection, via cable, to the appropriate input connector on the JD-TV108.


Viewing Angle and Handle Adjustment



The viewing angle of this DVD Player can be adjusted by tilting the unit's body up to 15° back on its base. Thus, the adjustable viewing angle is between 0° and approximately 15°.

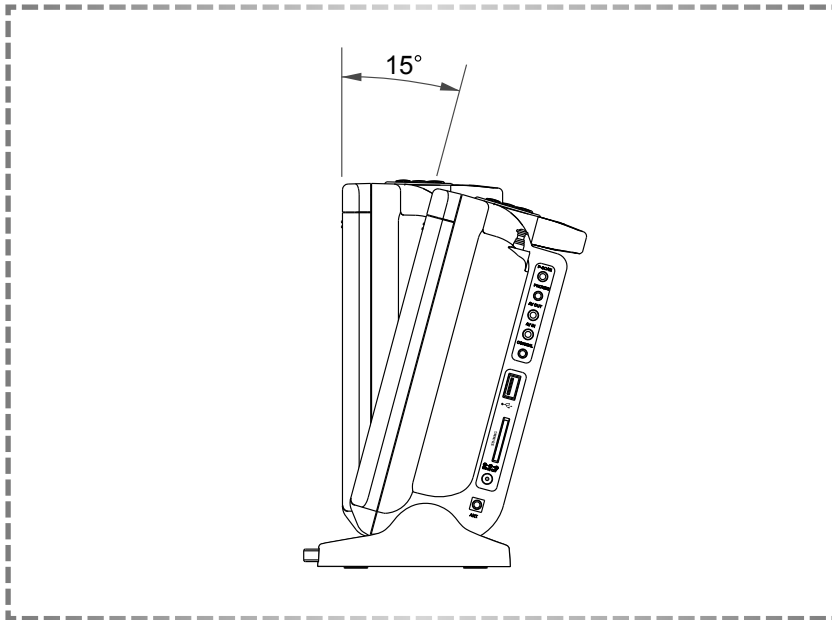

The handle can be raised for convenient carrying of the DVD player.

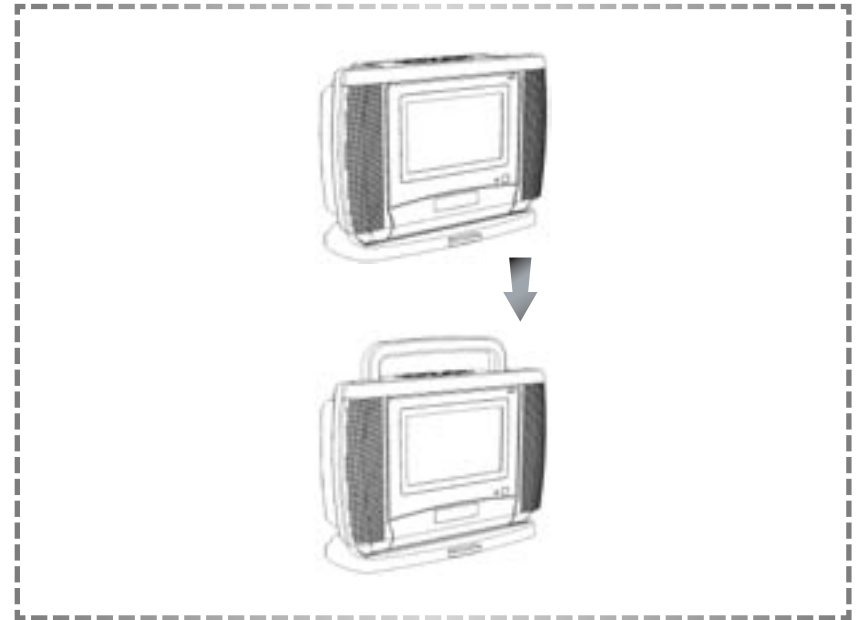

Caution:


- To avoid possible injuries and damage to the device, do not place your hands between the unit's body and its base, or press on the LCD screen while adjusting the angle.




USB Flash Drive and SD/MMC Card Operation


1. **You can** insert a USB Flash Drive in the USB port or an SD/MMC card in the slot on the unit's right panel to experience its contents, which is typically photos or music.

Insert a USB Flash Drive

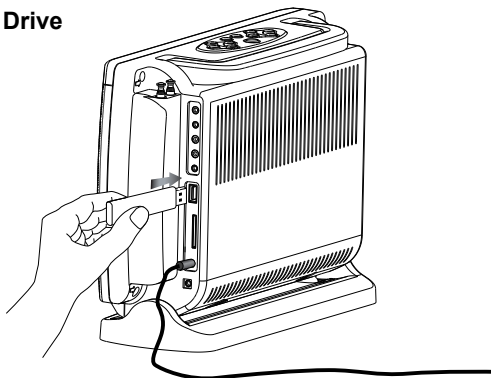


Insert a SD/MMC Card

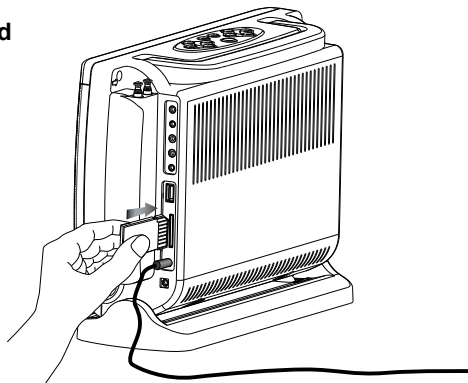





2. Press  **Mode** button on the remote control to select USB Mode or SD/MMC Card Mode.





Note:

- Press  **Mode** a number of times to toggle through different modes, which include “DVD Mode”, “USB”, “CARD”, “AV IN” and “TV TUNER”.

3. A file list appears on the screen, press  **Up** /  **Down** on the remote control to select a preferred JPEG or MP3 file.
4. Press  **OK** or  **Play** to view the selected file.

For Picture File Playback Only

- Press  **Right** to rotate the picture clockwise by 90°.
- Press  **Left** to rotate the picture counter-clockwise by 90°.



Note:


- Playable formats for the USB Flash Drive and SD/MMC cards include JPEG and MP3.
- If the JPEG file size is over 1.0MB, it may take longer to read.



To receive TV signals, you can use the built-in telescoping antenna, an (external) outdoor antenna, cable feed, or satellite.


Telescoping Antenna TV Signal

1. Raise the Telescoping Antenna and place the unit in the best position to receive the strongest TV signal.

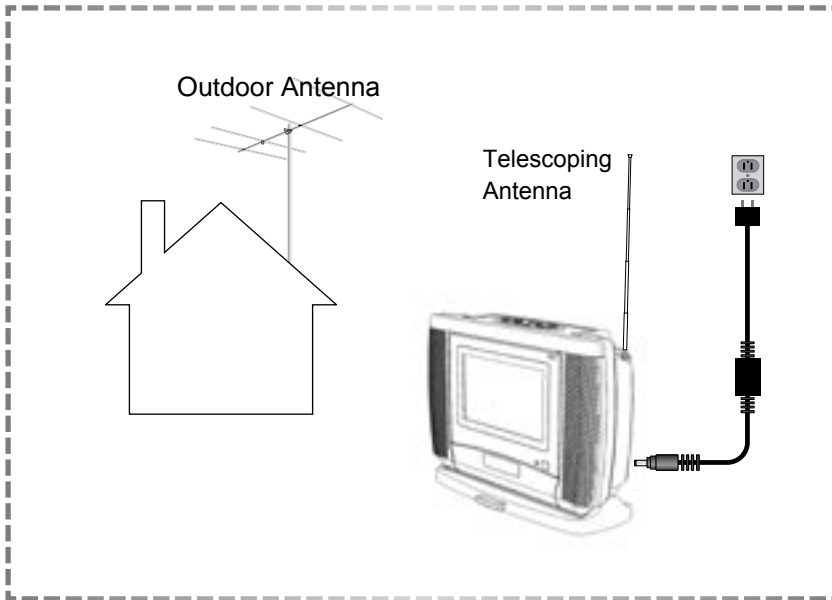

Receiving TV Signal from Cable

1. Connect the RF cable from the outdoor antenna or cable TV provider, to the ANT. jack on the right side of the player.

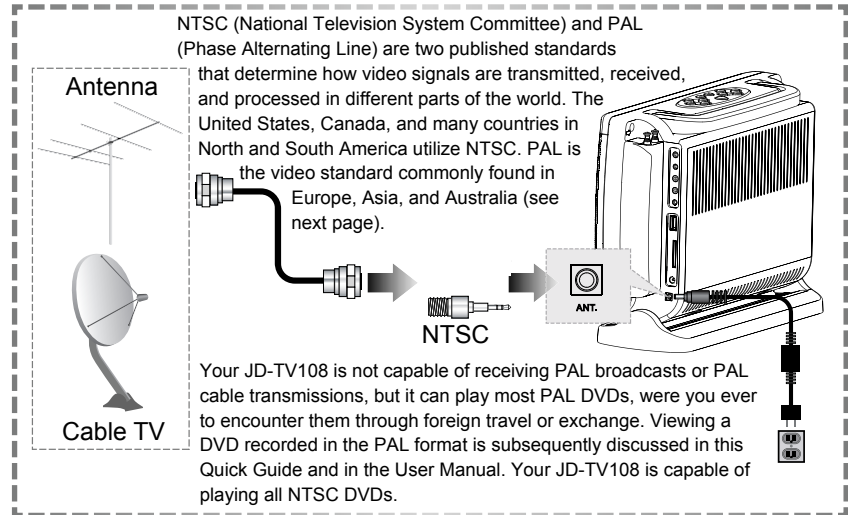

Note:

- Before connecting the RF coaxial cable to the Antenna/Cable TV signal input (ANT.) jack of the DVD player, you will need an NTSC adapter (shown above).



TV Tuner Operation

Countries that use the NTSC Video Standard

Canada, Japan, Korea, Panama, Taiwan, United States, Peru, Chile, Mexico, etc.

Countries that use the PAL Video Standard

PAL-B/G

Australia, Denmark, Finland, Germany, Holland, Italy, Malaysia, New Zealand, Portugal, Spain, Singapore, Sweden, Switzerland, Thailand, etc.

PAL-I/I

Hong Kong, South Africa, Ireland, United Kingdom, etc.


PAL-D/K

Czech, China, Hungary, Poland, etc.

Note: The -B/G, -I/I, and the -D/K designations are small variations within the PAL standard that apply to different countries. For all intents and purposes, these suffixes can be ignored.

How to Use the TV Tuner


- Make sure that the DVD Player is correctly connected.
- TV reception quality may be different due to various areas.

1. Press  **Power** button on the top panel of the unit to turn on the DVD Player.

2. Press  **Mode** to select TV Tuner Mode.





Note:

- Press  **Mode** a number of times. You can toggle through different modes, including "DVD Mode", "USB", "CARD", "AV IN" and "TV TUNER".

3. Press  **TV** to select CABLE or ANTENNA as the TV source.

4. Press  **Search**, a TV tuner window appears on the screen.

Channel	◀ 56 ▶
Freq	◀ 415.3MHz ▶
Favorite	◀ Yes ▶
Auto search	▶

5. Press  **Up** /  **Down** to highlight a preferred option.



6. Press **Left** / **Right** to select a setting for the highlighted option.

Channel

- Press **Right** to select the next channel or press **Left** to select the previous channel.

Freq:

- Press **Right** to increase the frequency or press **Left** to decrease the frequency for the best tuning.

Favorite:

- Press **Left** / **Right** to select "Yes" or "No". "Yes" allows the channel to be included when the CH-/CH+ button is used.

Auto search:

- Press **Right** and tuner search starts automatically and allows the channel to be confirmed.



Note:

- After completing **Auto Search**, the DVD player will store all available TV channels. However, if more channels become available in your area, **Auto Search** may need to be conducted again to update the available channels.
- Each time **Auto Search** is run, all the previously stored channels will be erased and replaced.

7. To leave the TV tuner window, press **Search** again.

To Select Preferred Available Channels

1. Press **Channel-** / **Channel+** to choose a preferred (i.e. favorite) channel for viewing.



Note:

- This function only works with available channels.
- If a channel is set "No" in the Favorite setting, the channel will be skipped when pressing **Channel-** / **Channel+** to toggle through channels.

To Select a Specific Channel

1. Press **Number Button(s)** to specify the channel.



Note:

- This function can be applied to all the channels, including those that are set to "No" in the Favorite setting.

To Recall Between the Current Channel and the Previous Channel

1. Press **Repeat**, and the previously selected channel can will be recalled.

